




euro-wall®

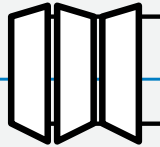


FOLDING

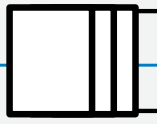

SLIDING

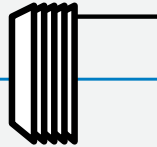

STACKING

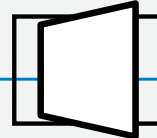

PIVOT

EURO VISTA FIXED UNIT™ INSTALLATION GUIDE

Corporate

2200 Murphy Court • North Port, FL 34289
888.989.3876 • 941.979.5316

Showroom

1211 Stirling Road, Unit 102 • Dania Beach, FL 33004
954.610.2572

www.euro-wall.com

STEP 1

Checklist and Inspection

- ✓ 1: Verify all fixed units, mull bars and glass are the correct size, shape and color.
- ✓ 2: Inspect all components for damage prior to installation.
- ✓ 3: If there are any deficiencies or damages in parts and / or materials, contact Euro-Wall immediately at 888-989-3876.

STEP 2

Verify Opening

- ✓ 1: Measure opening and verify fixed unit will fit plumb and square in opening.
(See Diagram 1)

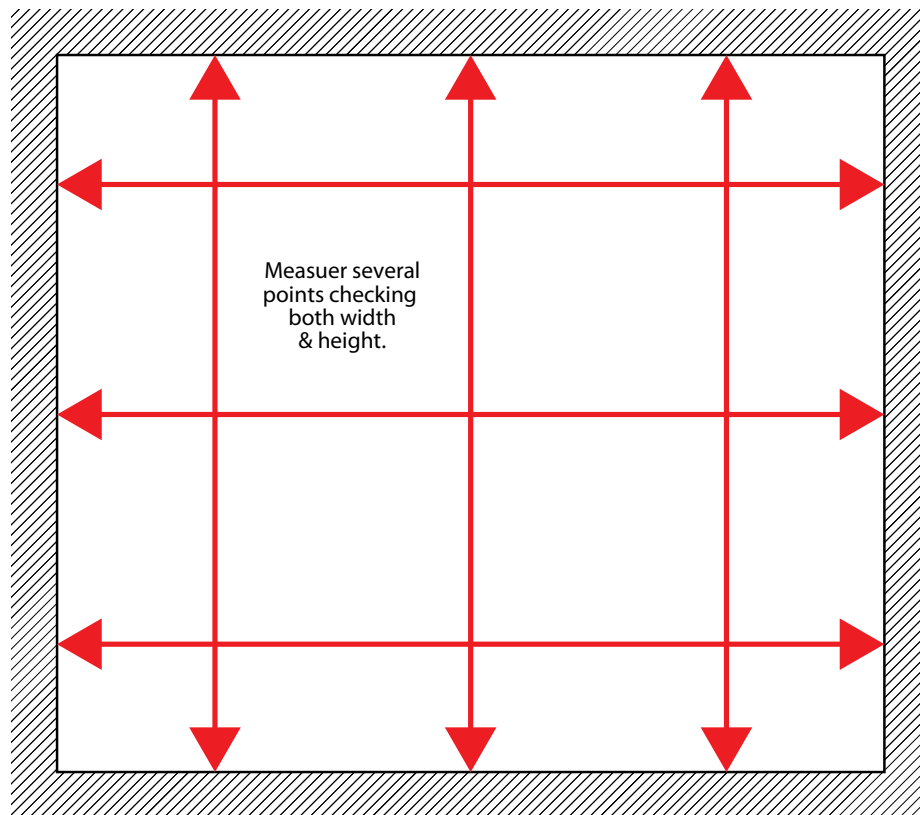


Diagram 1

STEP 3

Remove Glass

- ✓ 1: Remove snap track and small rubber gasket (see Diagram 2) from the exterior side of the fixed unit. Leave bedding gasket installed on the interior.
- ✓ 2: Remove the glass.

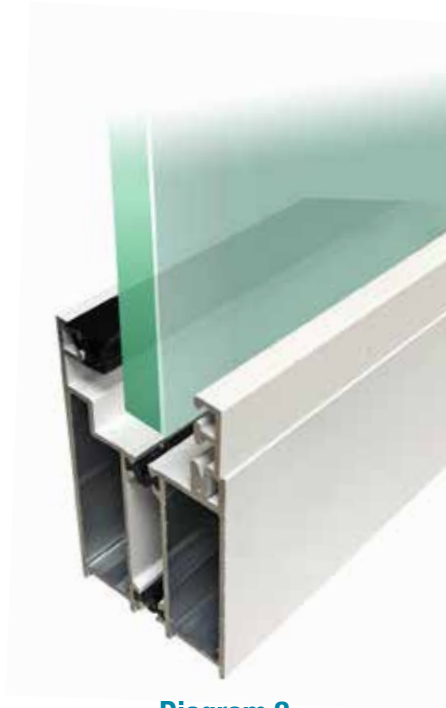
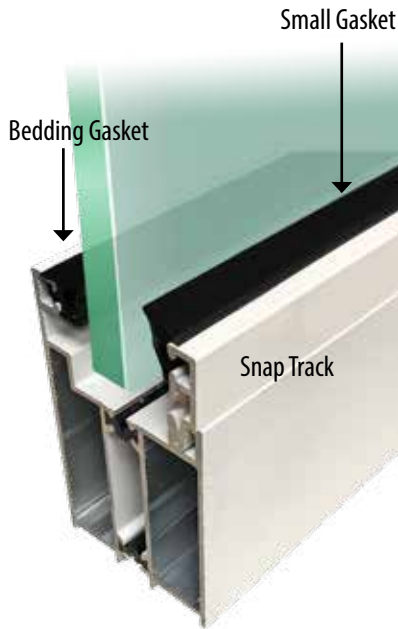


Diagram 2

Remove Snap Track and Small Gasket then Remove Glass

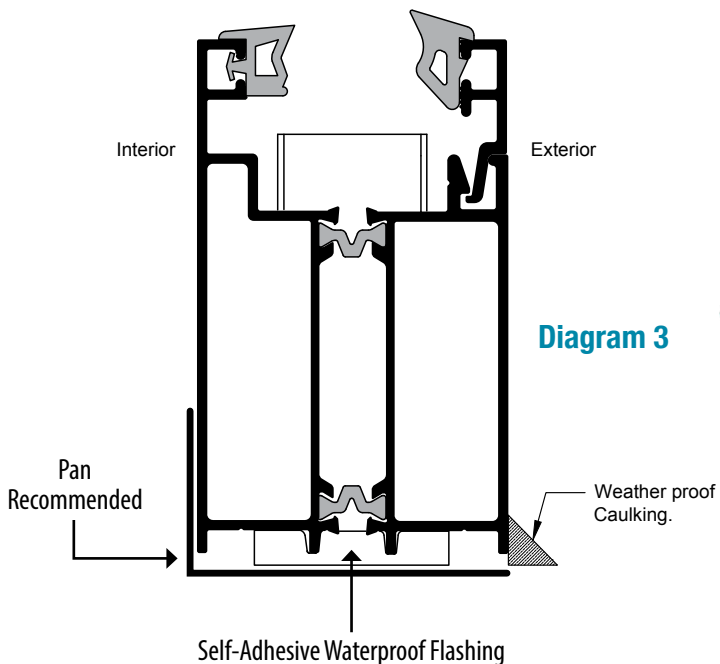


Diagram 3

STEP 4

Install Self-Adhesive Waterproof Flashing

- ✓ 1: Install self-adhesive waterproof flashing (not supplied) around all sides of the fixed unit. (See Diagram 3).

STEP 5

Placing Fixed Unit Into Opening

- ✓ 1: Install rubber water seal or sealant onto opening (see Diagram 4).
- ✓ 2: Place first fixed unit in opening verifying ribs on rails are embedded in sealant.



Diagram 4

STEP 6

Securing / Fastening Fixed Unit Into Opening

- ✓ 1: Install all anchor screws around fixed unit making sure to vacuum all dust from holes and dip screws in sealant (silicone or 795) before installation.
- ✓ 2: Install connecting fixed unit mull bar (if applicable). If mull bar is used, seal mull bar to sides of fixed units using sealant/rubber water seal (silicone or 795).

STEP 7

Reinstall Glass / Sealing Fixed Unit

- ✓ 1: Re-Install glass in fixed unit and proceed to install glazing rubber around the fixed unit and re-install the snap track. Make sure to cut ends of glazing rubber at 45 degree angles to create a solid seal.
- ✓ 2: Once all glazing rubber is installed, use silicone / 795 in all 4 corner of the glazing rubber to create a water seal.
- ✓ 3: After glass is installed, finish by using silicone / 795 to seal mull bar seams to the fixed units and use silicone/795 to seal outer edge of fixed units to substrate.